
cluster

Payment processing bracket 2017

cluster

Payment processing bracket


Back view

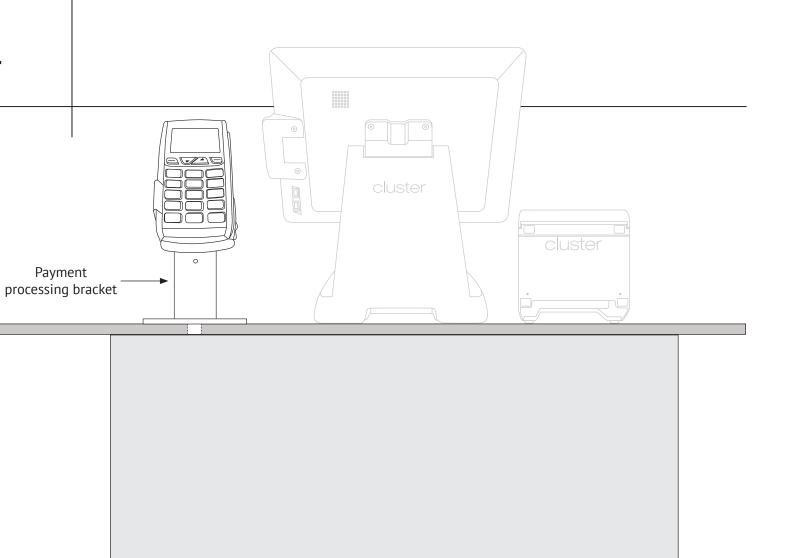



Payment processing bracket hole

Top view

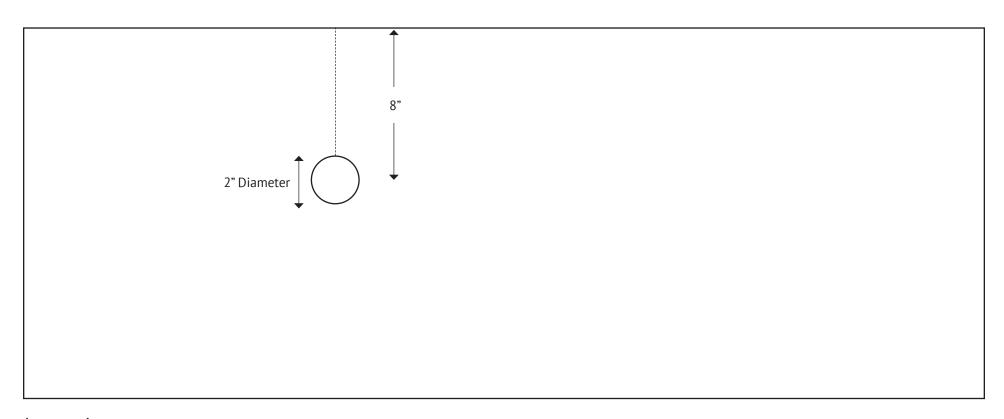

Instructions:

- 2. Place a mark on top of the counter, 8" from the counter edge.
- 3. Drill a 2" hole. This will be your payment processing bracket hole.